


Series 626/628-CB Industrial Pressure Transmitters

Specifications - Installation and Operating Instructions



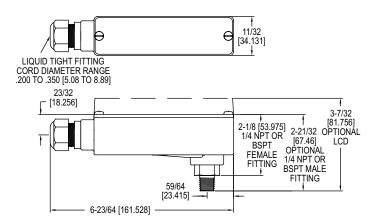

The Series 626 & 628 Industrial Pressure Transmitters monitors the pressure of compatible gases and liquids with 0.25% full-scale accuracy for 626 models or 1.0% full-scale accuracy for 628 models. The design employs a pressure sensor that can convert a single positive pressure into a standard 4-20 mA output or field selectable voltage output. The terminal block, as well as a zero adjustment button, are easily accessed under the top cover. The Series 626 and 628 are designed to meet NEMA 4X (IP66) construction.

PRESSURE LIMITS							
Range	*Maximum Pressure	Over Pressure					
0 to 5 psi	10 psi	50 psi					
0 to 15 psi	30 psi	150 psi					
0 to 30 psi	60 psi	300 psi					
0 to 50 psi	100 psi	300 psi					
0 to 100 psi	200 psi	500 psi					
0 to 150 psi	300 psi	750 psi					
0 to 200 psi	400 psi	1000 psi					
0 to 300 psi	600 psi	1500 psi					
0 to 500 psi	1000 psi	2500 psi					
0 to 600 psi	1200 psi	3000 psi					
0 to 1000 psi	2000 psi	5000 psi					
0 to 1500 psi	3000 psi	5000 psi					
0 to 3000 psi	6000 psi	7500 psi					
*Pressures exceeding the maximum pressure limit							

may cause a calibration shift of up to ±3% of full scale.

SPECIFICATIONS

Service: Compatible gases and liquids.

Wetted Materials: Type 316L SS.

Accuracy: 626: 0.25% FS, 0.20% RSS; 628: 1.0% FS, 0.5% RSS; 626 absolute ranges: 0.5% FS, 0.35% RSS (includes linearity, hysteresis, and repeatability).

Temperature Limits: 0 to 200°F (-18 to 93°C).

Compensated Temperature Limits: 0 to 175°F (-18 to 79°C).

Pressure Limits: See chart.

Thermal Effect: 626: ±0.02% FS/°F; 628: ±0.04% FS/°F (includes zero and span). Power Requirements: 2-wire: 10-35 VDC; 3-wire: 13-35 VDC or isolated 16-33

VAC (reverse polarity protected).

Output Signal: 2-wire: 4-20 mA; 3-wire: Field selectable 0-5, 1-5, 0-10, or 2-10

VDC.

Zero Adjustment: Push button inside conduit enclosure.

Response Time: 300 msec.

Loop Resistance: Current output: 0 to 1000 Ω (max), Rmax = 50(Vps-10); Voltage output: Minimum load resistance = 5 k Ω (0-5, and 1-5 VDC), 15 k Ω (0-10 and 2-10

Current Consumption: 38 mA (max).

Electrical Connections: Removable terminal block; 1/2" female NPT conduit.

Process Connections: 1/4" female or male NPT or BSPT.

Enclosure Rating: Designed to meet NEMA 4X (IP66) for non-LCD models.

Mounting Orientation: Not position sensitive.

Weight: 10 oz (283 g). Compliance: CE.

Phone: 219-879-8000

www.dwyer-inst.com

Fax: 219-872-9057 e-mail: info@dwyermail.com

INSTALLATION

- 1. Location: Select a location where the temperature of the unit will be between 0 and 175°F (-18 to 79°C). Distance from the receiver is limited only by total loop resistance. The tubing feeding pressure to the instrument can be practically any length required, but long lengths will increase response time slightly.
- 2. Position: The transmitter is not position sensitive. However, all standard models are originally calibrated with the unit in a position with the pressure connection downward. Although they can be used at other angles, for best accuracy, it is recommended that units be installed in the position calibrated at the factory.
- Pressure Connection: Use a small amount of plumber's tape or other suitable sealants to prevent leaks. Be sure the pressure passage inside the port is not blocked

4. Electrical Connections

Wire Length - The maximum length of wire connecting the transmitter and receiver is a function of wire size and receiver resistance. Wiring should not contribute to more than 10% of the receiver resistance to total loop resistance. For extremely long runs (over 1000 ft or 305 m), choose receivers with higher resistance to minimize the size and cost of connecting leads. Where wiring length is under 100 feet (30.5 m), wire as small as 22 AWG can be used.

CURRENT (4-20 mA) OUTPUT OPERATION

An external power supply delivering 10-35 VDC with minimum current capability of 40 mA DC (per transmitter) is required to power the control loop. See Figure 1 for connection of the power supply, transmitter, and receiver. The range of appropriate receiver load resistance (RL) for the DC power supply voltage available is expressed by the formula:

$$RL Max = Vps - 10$$

$$20 mA DC$$

Shielded cable is recommended for control loop wiring.

Electrical connections to the Series 626/628-CB pressure transmitters are made to the terminal block located inside the housing. Remove the screws and lift off the cover. Lift off the terminal block for wiring. Wire as show in Figure 1 or 2. Use Figure 1 for current output connection. Use Figure 2 for current output with optional LCD display. If ordering pre-wired cable, black wire is negative [-] and red wire is positive [+].




Figure 1: Current output connection

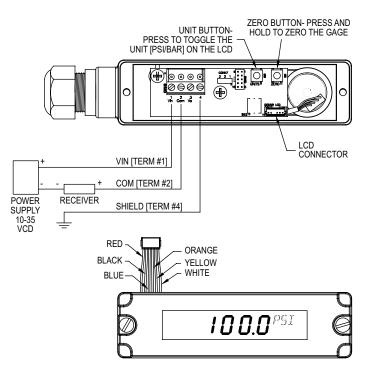


Figure 2: Current output with optional LCD

M-12 Pin Connector with Current Output

For the optional M-12 4 pin connector, wire to pins as shown in Figure 3.




Figure 3: Current output with optional M-12 4 pin connector

VOLTAGE (0-5, 1-5, 0-10, or 2-10 V) OUTPUT OPERATION

To select the voltage output that is going to be used, configure the DIP switches according to the Figure 4 below. Power must be cycled whenever dip switches are changed to select output.

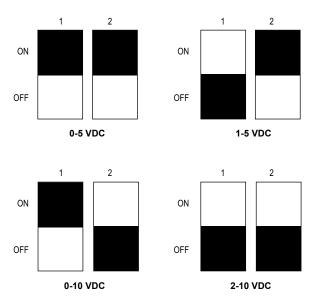


Figure 4: Voltage output DIP switch selection




Figure 5: Voltage output connection

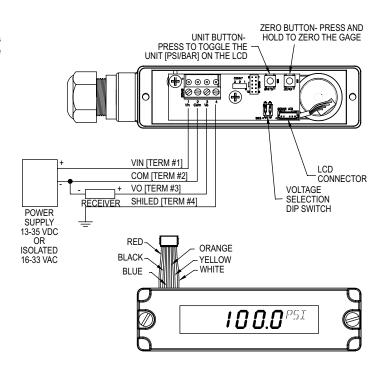


Figure 6: Voltage output with optional LCD

M-12 4 Pin Connector with Voltage Output

For the optional M-12 4 pin connector, wire to pins as shown in Figure 7.




Figure 7: Voltage output with optional M-12 4 pin connector

MODEL CHART									
Example	626	-02	-CB	-P1	-E2	-S8	-NIST	626-02-CB-P1-E2-S8-NIST	
Series	626							0.25% FS accuracy	
	628							1.0% FS accuracy	
Range		06						0 to 5 psi	
		07						0 to 15 psi	
		80						0 to 30 psi	
		09						0 to 50 psi	
		10						0 to 100 psi	
		11						0 to 150 psi	
		12						0 to 200 psi	
		13						0 to 300 psi	
		14						0 to 500 psi	
		22						0 to 600 psi	
		15						0 to 1000 psi	
		16						0 to 1500 psi	
		18						0 to 3000 psi	
		19						0 to 5000 psi	
		26						0 to 8000 psi	
Housing			СВ					Conduit box housing	
Process Connection				P1				1/4" male NPT	
				P2				1/4" female NPT	
				P3				1/4" male BSPT	
				P4				1/4" female BSPT	
Electrical Connection					E1			Cable gland with 3' prewired cable	
					E2			Cable gland with 6' prewired cable	
					E3			Cable gland with 9' prewired cable	
					E5			1/2" female NPT conduit	
					E9			M-12 4 pin connector (not UL)	
Signal Output						S1		4-20 mA	
						S8		Selectable 0 to 5, 1 to 5, 0 to 10, or 2 to 10 VDC	
Options							AT	Aluminum tag	
							LCD	LCD display	
							NIST	NIST traceable calibration certificate	
							SPCL	Special cleaning for oxygen use	
Pressures exceeding the working pressure limit may cause a calibration shift of up to ±3% of full scale.									

MAINTENANCE/REPAIR

Upon final installation of the Series 626/628-CB Industrial Pressure Transmitter, no routine maintenance is required. The Series 626/628-CB is not field serviceable and is not possible to repair the unit. Field repair should not be attempted and may void warranty.

WARRANTY/RETURN

Refer to "Terms and Conditions of Sale" in our catalog and on our website. Contact customer service to receive a Return Goods Authorization number before shipping the product back for repair. Be sure to include a brief description of the problem plus any additional application notes.

Phone: 219-879-8000

Fax: 219-872-9057

www.dwyer-inst.com

e-mail: info@dwyermail.com